


NOTE: Customer service is our #1 priority and we are always willing to offer live support every step of the way.



Perfect Water Technologies, Inc.
www.ThePerfectWater.com
1-877-693-PURE
Copyright © 2021

Home Master® Series RO Tank Pressurization and Sanitization Instructions

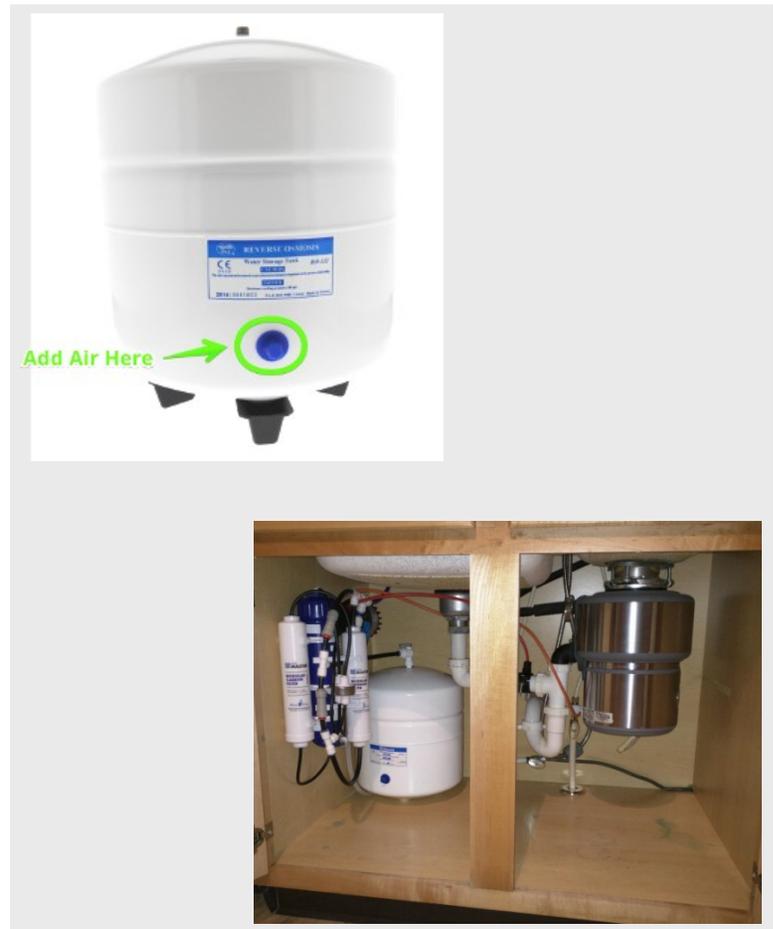

Annual Storage Tank Pressurization Procedure

1. Close [water supply valve](#) (handle perpendicular to tubing).
2. Ensure [tank valve](#) is open (handle in-line with tubing).
3. Open [RO faucet](#) by lifting the lever upward.
4. Unscrew the blue cap on the side of the tank (**see illustration below**).
5. Attach bicycle pump to valve on side of tank.
6. Slowly add air to tank until tank is empty - as air is added more water will flow from faucet until tank is empty.

6a. If at any point water flows from the valve on the side of the tank to which you are adding air to please contact customer service at 1-877-693-7873.

7. Once tank is empty (light) please measure air pressure and verify the air pressure measures 8 PSI from the valve on the side of the tank.

8. **SLOWLY** re-open [water supply valve](#) until fully open.
9. Once there is a thin stream at the faucet close the faucet and allow 2-3 minutes for system to fully pressurize.
10. Check all connections to verify a leak-free operation.
11. Allow 2-3 hours for tank to refill.



Annual Storage Tank Sanitization Procedure

1. Close [Feed Water Adapter](#).
2. Open [Tank Valve](#), if not already open.
3. Open RO Faucet and drain storage tank completely.
4. Once Storage Tank is completely drained, close Tank Valve and RO Faucet.
5. Remove black 3/8" tube from quick connect fitting on tank valve.
6. Unscrew and remove tank valve and locate tank nipple.
7. Using eyedropper or a small spoon, place a few drops of unscented (regular) bleach inside the 1/4" threaded water nipple at the top of the storage tank. Wait 2 minutes then shake out into sink. DO NOT touch the air nipple near the bottom of the tank found under a blue cap.
8. Proceed to wrap white plumber's pipe tape 5 times around the 1/4" water nipple on top of the reserve tank.
9. Hand tighten the reserve tank shut off valve to the 1/4" water nipple until it is snug. Do not over tighten.
10. Insert BLACK 3/8" tubing into the tank shut off valve. Push tubing all the way in, then pull back gently to check fit. Most push-pull fittings take about a 1/4" of tubing inserted into them. Make sure reserve tank shut off valve is in the CLOSED position, where the blue handle is perpendicular to the body and tubing. Affix product label found in the parts bag to the top of the reserve tank.
11. Open Feed Water Adapter very slowly.
12. Continue to Page #7 and complete Step #8 & #9 of the [Home Master RO – Owner's Manual](#).